## **CHAPTER 1**

## **INSTALLATION**

Before installing the card carefully read the Address Selection and Option Selection sections of this manual and configure the card according to your requirements. Be especially careful with address selection. If the addresses of two installed functions overlap you will experience unpredictable computer behavior.

## To install the card:


- 1. Turn off computer power.
- 2. Remove the computer cover.
- 3. Remove the blank I/O backplate.
- 4. Set switches for selected options. See manual section 3.
- 5. Select the base address on the card. See manual section 4.
- 6. Install the card in an I/O expansion slot.
- 7. Install the I/O cable.
- 8. Inspect for proper fit of the card and cables, tighten screws.
- 9. Replace the computer cover and apply power.

## SOFTWARE INSTALLATION

This package uses compression schemes to simplify installation and to permit use of a single diskette. A program is provided on your master disk to copy and expand the software package onto your floppy - or hard-drive. To begin the installation, place the software master diskette in a floppy drive and execute the INSTALL.EXE program. For example, if you have placed the master disk in floppy drive A, you would type "A:INSTALL [ENTER]" to execute the installation program.

The installation program will ask you for various installation options, and will provide default settings. These default settings may be selected (by pressing ENTER) if they will work with your particular application and system setup, or you can respond to the questions with appropriate answers as needed.

When all of the installation options have been set, the program will expand the program files into the destination you have selected. Once this process is complete, please put your Master Diskette in a safe place as backup.

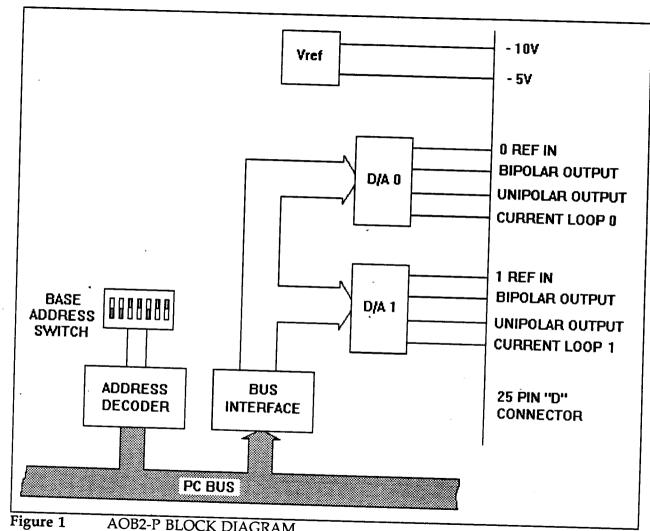

AOB2-P BLOCK DIAGRAM