

Measuring Voltage

Voltages in the range $\pm 5\text{VDC}$ may be directly applied to the analog inputs. Voltages higher than 5VDC should be attenuated by a simple resistive divider as shown in figure 2.

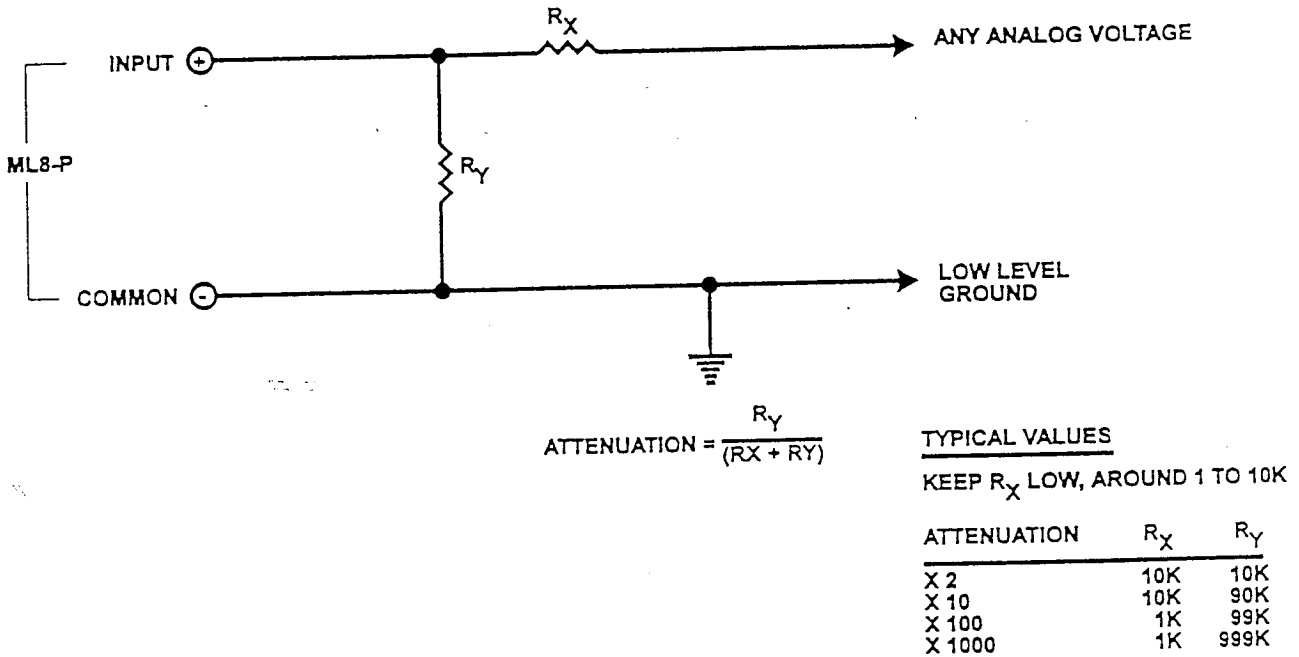


Figure 2 Voltage Attenuation for greater than 5VDC